


HOW TO USE ...

DRYWALL PATCH

45550 (10x10cm), 45551 (15x15cm)

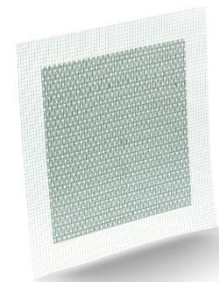

1



Clean the area that has to be repaired.

2



Apply the DRYWALL PATCH and press on well.

3



Then fill the PATCH and sand smooth if necessary Super simple!

4



Self-adhesive, tear-resistant premium fiberglass fabric strips, reinforced with an aluminum plate. For repairing plasterboard and renovating cracks and holes. Eh'klar!



Video:

<https://www.schuller.eu/en/p/drywall-patch2>

